

QUICK START GUIDE

Cuisinart®

Deluxe Convection Toaster Oven Broiler



Setup: Rack Positions

1. Lower Rack Position

For baking cakes, pizza and breads, as well as roasting meats and vegetables.



2. Middle Rack Position

For broiling and baking thicker items.



3. Upper Rack Position

For toasting, bagels, open faced sandwiches, quesadillas and broiling.



Cuisinart®

Deluxe Convection Toaster Oven Broiler

IMPORTANT!

Do not throw away these instructions. Read before operating your new Deluxe Convection Toaster Oven Broiler. Keep for future reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

See reverse side for Function Guide.

Function Guide

Use: Toast, Bagel, Bake, Broil, Keep Warm, Reheat

Toast or Bagel:

- Select Toast or Bagel.
- Press shade button for browning shades.
- Turn dial to set browning shades 1-7.
- If desired, press Defrost for frozen bread. You may press the Defrost button either before or after setting the shade.
- Press Start/Stop to begin toasting.
- Ready tone will sound at end of cycle and oven will turn off.

Bake, Keep Warm, or Reheat:

- Select function.
- Press Temp.
- Turn dial to enter temperature.
- Press Timer.
- Turn dial to enter cooking time.
- Press Start/Stop to start oven.
- Press Start/Stop to turn oven off.

Broil:

- Select Broil.
- Press Timer.
- Turn dial to enter cooking time.
- Press Start/Stop to start oven.
- Press Start/Stop to turn oven off.

Convection:

You may turn on the convection fan with Bake or Broil :

- Select function.
- Set oven Temp and Time.
- Press convection button.
- Press Start/Stop to start oven.
- Press Start/Stop to turn off oven.

Deactivating Oven Sounds:

- To turn off the electronic beeps press the Shade and Defrost buttons simultaneously for 2 seconds. To reinstate all the beeps, repeat. If you unplug the oven, beeps will turn back on.

Setting the Clock:

- Press Clock and time will start blinking in the display.
- Turn dial to select PM
- Turn dial to change hours.
- Turn dial to change minutes.
- Clock will start automatically when flashing stops.

Helpful Hints



If toasting two items, center them in the middle of the rack.



If toasting four items, place two in front and two in back, evenly spaced.



If toasting six items, place three in front and three in back, evenly spaced.

For Customer Service visit www.cuisinart.com or call 1-800-726-0190

See reverse side for Rack Positions.