

 
# QUICK REFERENCE GUIDE

# Cuisinart®

## Oven Central™

### Before the First Use

1. Remove all packaging materials and any promotional labels or stickers from your oven. Confirm all parts of your new appliance have been included.



2. Remove any dust from the unit by wiping the base, cover, and controls with a damp cloth. Thoroughly clean the accessories (dishwasher safe). Place the oven on a clean, flat surface where you intend to cook.

### Assembly Instructions

1. **Using the Baking Pan**  
Place the baking pan in the oven. Use this pan to bake, sauté and griddle.

**NOTE:** You may also cook directly in the fixed pan. This is beneficial for those dishes that require direct heat.



2. **Using the Cupcake Pan**  
Place the cupcake pan in the oven. Use this pan to make cupcakes and muffins.



3. **Using the Roast/Steam Rack**  
Place the baking pan in the oven first, then position the roast/steam rack on the pan. Use this rack to roast, steam, toast and brown.

**NOTE:** The rack can be placed in either direction, depending on the type of food being cooked.



**Assembly Instructions Continued on Reverse Side**

## Assembly Instructions

4.

### Using the Skewers

Place the baking pan in the oven, then set the skewers on the pan. Use the skewers to make satays and kebabs.



## Operating Instructions

1.

Plug in the oven. Turn the Timer knob to ON for continuous cooking or up to 30 minutes for timed cooking. A red indicator light will indicate the oven is preheating,



**NOTE:** When setting the timer for less than 10 minutes, turn the timer past the 10-minute mark and then back to desired time.

2.

Turn the Temperature knob to desired temperature from Warm to 450°F. A green indicator light will indicate when the oven is ready.



**NOTE:** We recommend you preheat with the oven closed.

## Cleaning and Care

1.

Turn the Timer knob to OFF and allow the oven to cool for at least 30 minutes.

2.

Dispose of any grease, fats or crumbs from the baking pan. Clean the accessories by hand or in the dishwasher. Wipe the housing base, fixed plates and controls with a soft, dry cloth.

## IMPORTANT

**Do not throw away. Read before operating your new Oven Central™.  
Keep for future reference.**

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

**For more helpful hints see Instruction Booklet**